

Instruction Manual

Please Read and Save Instructions





Congratulations on your purchase of a Minka-Aire™ ceiling fan! Your new fan will be a beautiful addition to your home, and will keep you comfortable throughout the year.

Minka-Aire™ offers a variety of ceiling fans: combinations of wood and brass finishes, solid designer colors, and unique glass and crystal designs. A large selection of light fixtures and light kits are also available. Ask your dealer about accessories that will allow you to customize your fan.

We're certain that your $Minka-Aire^{TM}$ fan will provide you with many years of comfort, energy savings and satisfaction. To ensure your personal safety and to maximize the performance of your fan, please read this manual thoroughly.

LIMITED LIFETIME WARRANTY

Minka-Aire™ warrants this fan to be free from defects in material and workmanship for one year from the date of purchase, except for the motor. Minka-Aire™ warrants to the original owner that the motor in this fan shall be free from defects in material and workmanship as long as the original purchaser owns the fan. Minka-Aire's™ only obligation under this limited warranty is to replace, repair or refund the purchase price any fan confirmed by Minka-Aire™ to be defective in material or workmanship after such fan is returned to Minka-Aire™ by the original purchaser along with a proof of purchase and with shipping charges prepaid. This warranty shall not apply to fans which have been damaged as a result of improper installation, removed from the original installation or subjected to use for which the fan was not designed. The customer shall be responsible for any cost of removing the old fan, installing a new fan or any other costs. This limited lifetime warranty is in lieu of all other expressed warranties. Minka-Aire™ shall under no circumstances be liable for any incidental or consequential damages.

Date Purchased				
Store Purchased				
Model No.	F547			
Wiodel No.				
Sorial No				

Contents

Safety First	1
Package Contents	2
Begin Installation	3
Hanging the Fan	4
THE ELECTRICAL CONNECTIONS	5
Finishing the Mounting	7
Attaching the Fan Blades	7
Attaching the Switch Cup	8
Operating Your Fan	9
Maintenance	10
Troubleshooting	11
Specifications	11



1151 W. Bradford Ct., Corona, CA 92882 All Rights Reserved





1. Safety First

- 1. Before you begin installing the fan, disconnect the power by removing fuses or turning off circuit breakers.
- 2. Be Cautious! Read all instructions and safety information before installing your new fan. Review the accompanying assembly diagrams.
- 3. Make sure that all electrical connections comply with local codes, ordinances, or National Electrical Codes. Hire a qualified electrician or consult a do-it-yourself wiring handbook if you are unfamiliar with installing electrical wiring.
- 4. Make sure the installation site you choose allows the fan blades to rotate without any obstructions. Allow a minimum clearance of 7 feet from the floor to the lowest edge of the blades. Fan blades must have a minimum clearance of 18" from the wall.
- 5. If you are mounting the fan to a ceiling outlet box, use a metal octagonal outlet box. Secure the box directly to the building structure. The outlet box and its support must be able to support the moving weight of

- the fan (at least 50 lbs.). Do not use a plastic outlet box.
- **6.** Attach the hanger bracket using the hardware supplied with the fan.
- 7. If you are mounting the fan to a joist, make sure it is able to support the moving weight of the fan (at least 50 lbs.).
- **8.** After you install the fan, make sure that all connections are secure to prevent the fan from falling.
- **9.** Do not insert anything into the fan blades while fan is operating.
- 10. Turn the fan off and wait for it to stop before reversing fan direction.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors which can not be built into this product. These factors must be supplied by the person(s) installing, caring for and operating the unit.

WARNING


SUPPORT DIRECTLY FROM THE BUILDING STRUCTURE


TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR OTHER PERSONAL INJURY, MOUNT FAN ONLY ON A U.L. LISTED OUTLET BOX OR SUPPORTING SYSTEM MARKED ACCEPTABLE FOR FAN SUPPORT AND USE THE HARDWARE PROVIDED WITH THE OUTLET BOX, MOST OUTLET BOXES COMMONLY USED FOR SUPPORT OF LIGHTING FIXTURES ARE NOT ACCEPTABLE FOR FAN SUPPORT AND NEED TO BE REPLACED.

CONSULT A QUALIFIED ELECTRICIAN IF IN DOUBT.

TO REDUCE THE RISK OF PERSONAL INJURY, DO NOT BEND THE BLADE HOLDERS WHILE INSTALLING, BALANCING THE BLADES OR CLEANING THE FAN. DO NOT INSERT FOREIGN OBJECTS BETWEEN ROTATING FAN BLADES.

PACKAGE CONTENTS 2.

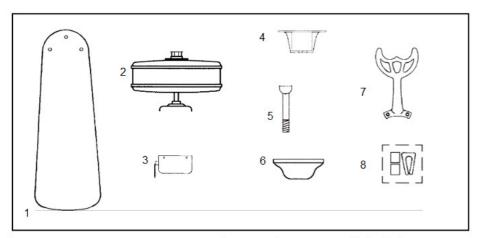

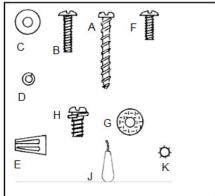

Unpack your fan and check the contents. You should have the following items:

- Fan Blades (5)
- 2. Fan Motor/Housing Assembly
- Switch Cup
- Hanger Bracket 4.
- 5. Standard Downrod Assembly
- 6. Canopy
- 7. Blade Bracket (5)
- Balancing Kit

Mounting Hardware:

J-Box Mounting:

(A)10# x 1-1/2"L (10# x 38mm) wood screws (2 pcs.)

Hanger Bracket Mounting:

(B)8-32x 1-1/2" (8-32 x 36mm) screws (2 pcs.)

(C)Metal Washers (2 pcs.)

(D)Lockwashers (2 pcs.)

(E)Wire Nut (3 pcs.)

(K)Star washer (2 pcs.)

Blade Attachment Hardware:

(F)3/16"-24 x 5/16"L (3/16"-24 x 8mm) flange head screws (15 pcs.) (G) Fiber Washers (15 pcs.)

Blade Holder Hardware:


(H) 1/4"-20 x 7/16"L (1/4"-20 x 11mm) screws w/lockwashers (10 pcs.)

Switch Cup Hardware:

(J) Pull Chain Fob (1 pc.)

BEGIN INSTALLATION

Tools Required: You will need a phillips screw driver, slotted screw driver, adjustable wrench, stepladder, wire cutters, and electrical tape.

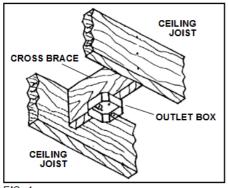

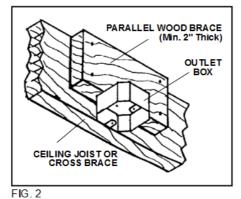
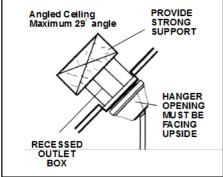


FIG. 1



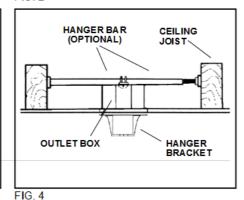


FIG. 3

Mounting Options

If there isn't an existing mounting Figures 1, 2 and 3 are examples of box, then read the following different ways to mount the outlet instructions. Disconnect the power box. Note: You may need a longer by removing fuses or turning off downrod to maintain proper blade circuit breakers.

Secure the outlet box directly to the downrods are available from your building structure. The outlet box $Minka-Aire^{TM}$ dealer. and its support must be able to fully To hang your fan where there is support the moving weight of the an existing fixture but no ceiling fan (at least 50 lbs.). Use a U.L. joist, you may need to install a Listed metal outlet box. Do not use hanger bar as shown in Figure 4 a plastic outlet box.

clearance when installing on a steep, sloped ceiling. Longer

(available at your Minka-Aire™ dealer).

Hanging the Fan 4.

REMEMBER to turn off the power. Follow the steps below to hang your fan properly:

Step 1. Secure the hanger bracket to the ceiling outlet box using screws, lock washers, and flat washers included with the fan. (Fig. 5)

Step 2. Loosen the two set screws in the top coupling of the motor assembly. (Fig. 6)

Step 3. Remove downrod hanger ball by loosening set screw, removing the cross pin, and sliding ball off rod. Remove the hitch pin and lock pin. (Fig. 7)

Step 4. Carefully feed fan wires up through the downrod. (Fig. 8) Thread the rod into the coupling, next line up holes, then replace lock pin and hitch pin. Tighten set screws.

Step 5. Slip canopy onto downrod. (Fig. 9). Carefully reinstall hanger ball onto rod being sure that crosspin is in correct position, set screw is tight and wires are not twisted.

Step 6. Now lift motor assembly into position and place downrod ball into hanger bracket. Rotate until the check groove has dropped into the registration slot and seats firmly. (Fig. 10). Rod should not rotate if this is done correctly.




 


FIG. 5

FIG. 6

 

 


FIG. 7

FIG. 8

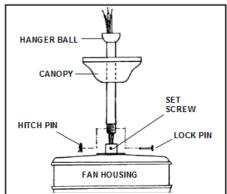


FIG. 9

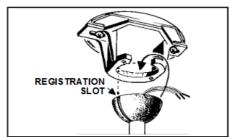


FIG. 10

5. The Electrical Connections

REMEMBER to shut the power off at the circuit breaker or fuse box.


Follow the steps below to connect the fan to your house supply wires. Use the wire nuts supplied with your fan. Secure the wire nuts by wrapping the connection with electrical tape.

Step 1. Connect the black (hot) wire from the ceiling to the black and the blue wires from the fan. Connect the white (Neutral) wire from the ceiling to the white wire from the fan. (Fig 11)

Step 2. If your outlet has a ground wire (Green or Bare Copper) connect the fan ground wires (on hanger ball and hanger bracket) to it; otherwise, connect the fan ground wire on hanger ball directly to hanger bracket (Fig. 11)

Step 3. Figure 12 & 13 Illustrate the wiring connections using optional wall unit. (Available at your Minka-Aire™ Retailer.)

NOTE: If a light kit is not included with your fan, one can be purchased at you Minka-Aire™ Retailer.

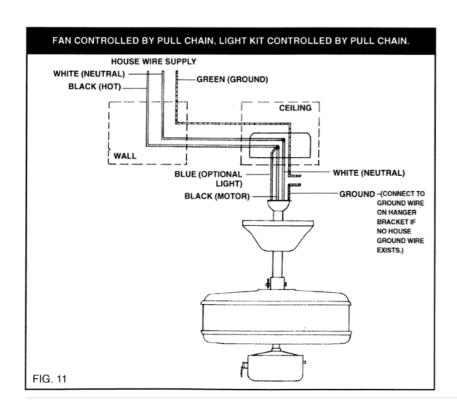

a e d r , n r

6. Finishing the Mounting

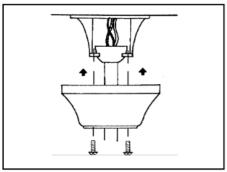


FIG. 14

Step 1. Slide the canopy up to ceiling as shown in Figure 14. Make sure you place the wires safely into outlet box. Secure the canopy to the hanger bracket with the two screws provided on the bracket.

7. Attaching the Fan Blades

Step 1. Attach the fan blade to the blade bracket using the screws provided. Tighten screws securely. Repeat for remaining blades. (Fig. 15)

Step 2. Remove the rubber stops from the motor. Rotate the motor so that the screw holes are revealed through the opening on switch cup plate. Align holes in blade bracket and motor and secure with proper screws. Repeat process with the other blade brackets. (Fig. 16)

Note: You have the option of installing either five or four blades. If you are using four blades, mount blade bracket to the inner screw holes of motor. If you are using five blades, mount blade bracket to the outer screw holes of motor. (Fig.16)

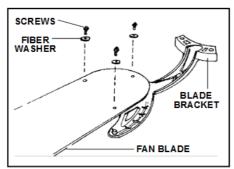


FIG. 15


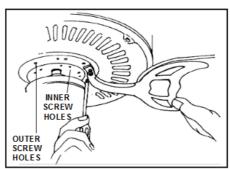


FIG. 16

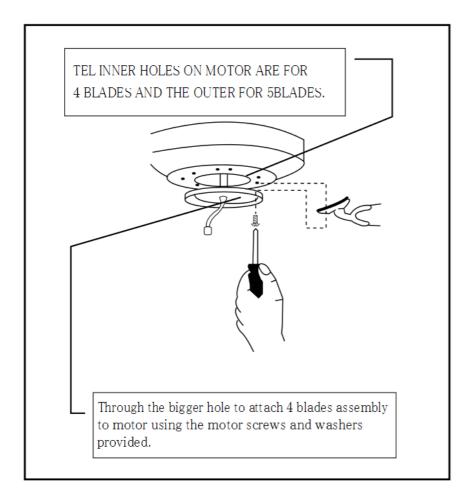

8. Attaching the Switch Cup

Step 1. Remove screws in switch cup ring. While holding the switch cup under your fan, snap the wire connector plugs together. (Figure 17). Then push the switch cup up to switch ring and position so holes line up. Reinstall screws and tighten.

Step 2. Attach the pull chain fob to the chain on the switch cup.

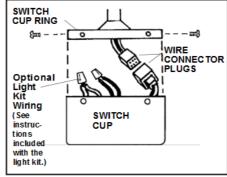


FIG. 17

9. Operating your Fan

Restore power to ceiling fan and test for proper operation.


Speed settings for warm or cool weather depend on factors such as the room size, ceiling height, number of fans, etc.


The slide switch, on the switch cup, controls the forward or reverse direction of the fan. **Down** or to the **left** is for warm weather operation. **Up** or to the **right** is for cool weather operation.

NOTE
Wait for fan to stop before changing the setting of the SLIDE SWITCH.

Warm weather - (Counter Clockwise) A downward air flow creates a cooling effect as shown in Figure 18. This allows you to set your air conditioner on a warmer setting without affecting your comfort.

Cool weather - (Clockwise) An upward airflow moves warm air off the ceiling area as shown in Figure 19. This allows you to set your heating unit on a cooler setting without affecting your comfort.

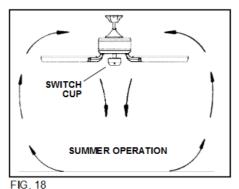

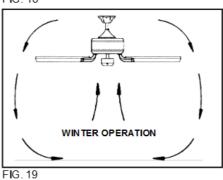

The pull chain on your fan controls the speed settings as follows:

1st pull - Highest Speed 2nd pull - Medium Speed 3rd pull - Lowest Speed 4th pull - Turns Fan Off

Maintenance 10.

Here are some suggestions to help you maintain your fan.

- 1. Because of the fan's natural movement, some connections may become loose. Check the support connections, brackets, and blade attachments twice a year. Make sure they are secure. (It is not necessary to remove fan from ceiling.)
- 2. Clean your fan periodically to help maintain its new appearance over the years. Do not use water when cleaning. This could damage the motor, or the wood, or possibly cause an electrical shock.
- 3. Use only a soft brush or lint-free cloth to avoid scratching the finish. The plating is sealed with a lacquer to minimize discoloration or tarnishing.

- **4.** You can apply a light coat of furniture polish to the wood for additional protection and enhanced beauty. Cover small scratches with a light application of shoe polish.
- 5. There is no need to oil your fan. The motor has permanently lubricated bearings.
- **6.** All glass should be cleaned using lukewarm soapy water and a soft cloth or sponge. DO NOT IMMERSE GLASS IN HOT WATER. DO NOT PUT GLASS INTO AN AUTOMATIC DISHWASHER.

WARNING

Make sure the power is off at the electrical panel box before you attempt any repairs. Refer to the section,
"Making Electrical Connections".

11. Troubleshooting

Problem

Solution

Fan will not start.

- 1. Check fuses or circuit breakers.
- Check line wire connections to fan and switch wire connections in switch housing.

CAUTION: Make sure main power is off.

Fan sounds noisy.

- Allow a 24-hour "break-in" period. Most noises associated with a new fan go away during this time.
- 2. Make sure all motor housing screws are snug.
- Make sure the screws that attach the fan blade bracket to the motor hub are tight.
- Some fan motors are sensitive to signals from solid-state variable speed controls. If you have installed this type of control, choose and install another type of control.

Fan Wobbles

- Check that all blade and blade holder screws are secured.
- Use the enclosed blade balancing kit if blade wobble is still excessive. (See instructions included with the balancing kit.)

NOTE: All blade sets are grouped by weight. Because natural woods vary in density, the fan may wobble even though blades are weight matched.

12. Specifications

Fan	Size Speed	Volts	Amps	Watts	RPM	CFM	N.W.	G.W.	C.F
52"	Low Med High	120	0.21 0.32 0.47	10.9 25 56	62 105 158	2,500 5,100 8,200	6.0KGS	6.8KGS	1.33

These are typical readings. Your actual fan may vary. They do not include Amps and Wattage used by the light kit.

For any additional information about your Minka-Aire $^{\text{\tiny{TM}}}$ Ceiling Fan, please write to:



For customer assistance call: 1-800-307-3267